# HOW TO PROPERLY MAINTAIN YOUR BATTERY

### WATERING

Never water a battery unless the battery is fully charged.

Proper Water Level: Water is above the plates and below the bottom of the vent well

Water Quality: Only use deionized water or water free from high impurity levels

(<100 parts/million)

Weekly: Check water level after a charging cycle

**Bi-Monthly:** If watering system present, manually check cell's water level and

watering system functionality



# **CHARGING**

#### **CONVENTIONAL CHARGE**

- The battery should always be recharged immediately following a complete discharge
- Perform an equalization charge weekly
- Batteries must rest after charging for a minimum of 8 hours

#### **OPPORTUNITY CHARGE**

- Battery on charge when not in use
- Ideal operating range is between 20-60% state of charge
- Battery must be fully charged daily
- Battery must be equalize charged weekly



- Inspect all cables and connectors prior to plugging in
- Confirm that the charger has started and address any error messages (visual check)
- Press the Stop button before disconnecting the battery from the charger (avoid hot disconnects)

### **TEMPERATURE**

### **CONVENTIONAL CHARGE**

Operating/charging temperature range:
60° - 100° F

#### **OPPORTUNITY CHARGE**

Operating/charging temperature range:
60° - 125° F



- Delay charging if battery is outside of safe temperature range
- Operating temperatures < 60 F result in less capacity and special charging may be required.

# DISCHARGING

### **CONVENTIONAL CHARGE**

 Batteries are designed to be discharged to 20% state of charge (SOC) daily

#### **OPPORTUNITY CHARGE**

 Ideal battery state of charge (SOC) is between 40-80% of rated battery capacity



- Irreversible damage occurs when battery is discharged below 20% state of charge (SOC)
- Always recharge when the truck low battery indicator turns on

# GENERAL MAINTENANCE

- Top of battery should always be clean, dry, and free of any items
- Every month, you should:
  - Inspect and clean top of battery
  - Inspect cables and connectors on batteries and chargers
  - Read and record individual cell voltage and specific gravity readings



For Assistance, Contact Stryten Customer Service at 1-866-462-2288.

